







1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS00001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	HT-FP 10W,HT-FP 30W,HT-FP 50W
4		Light sources maker model	HT-FP 10W,HT-FP 30W,HT-FP 50W

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
<b>Step 1</b>	Using the cross screwdriver to remove screws securing the cover.		Cross screwdriver
<b>Step 2</b>	Removing the glass plate by hand, then taking the shell off.		By hand
<b>Step 3</b>	Unscrew the screws at both ends of the PCB with a cross screwdriver		Cross screwdriver
<b>Step 4</b>	Remove the bracket by unscrewing the screws at both ends of the bracket with an adjustable wrench.		Adjustable wrench
<b>Step 5</b>	Remove the connector with a adjustable wrench and take the wire out.		Adjustable wrench
<b>Step 6</b>	Complete dismantling		By hand