LIGHT SOURCE REMOVING INSTRUCTION		LIGHT SOURCE REMOVING INSTRUCTION	Creation date (dd/mm/yyyy):	29/09/2022
		ALITY	Last update date (dd/mm/yyyy):	29/09/2022
1	General information	Supplier's name or trade mark	ADEO Services	
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN	
3		Model Identifier - Luminaire Supplier reference	7530R	
4		Light sources maker model	TL7530R	

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explaination of the step	Pictures	Tools
Step 1	 Loosen the eight screws on the back of the lamp body with a screwdriver Take out the reflector of the lamp cover 		screwdriver
Step 2	1. Loosen the LN terminal screw with a screwdriver and pull out the LN electronic wire 2. Loosen the ground wire screw with a screwdriver		screwdriver
Step 3	1. Use a screwdriver to loosen the lock light board screws 2. Take out the light board		screwdriver
Step 4			
Step 5			
Step 6			
Step 7			

Step 8		
Step 9		