LIGHT SOURCE REMOVING INSTRUCTION		LIGHT SOURCE REMOVING INSTRUCTION	Creation date (dd/mm/yyyy):	24/9/2022	
4			Last update date (dd/mm/yyyy) :	24/9/2022	
1	informati	Supplier's name or trade mark	INSPIRE	INSPIRE	
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN		
3		Model Identifier - Luminaire Supplier reference	7632205112		
4	Gene	Light sources maker model	7632205112M		

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explaination of the step	Pictures	Tools
Step 1	Unscrew the screws with a cross screwdriver, press the buckle and take out the plastic plate		Screwdrvier - Crosshead
Step 2	Unscrew two screws with a cross screwdriver, and remove the terminal with a slotted screwdriver		Screwdrvier - Crossheac
Step 3	Remove the switch label, unscrew two screws with a cross screwdriver, unscrew three closed terminals with a slotted screwdriver, and take out the sensor module		Screwdrvier - Crosshead
Step 4	Unscrew the four screws on the control board with a cross screwdriver, Remove the control board module from the sensor module		Screwdrvier - Crossheac
Step 5	Unscrew the 12 screws on the lamp base with a cross screwdriver. Take out diffuser and reflection cover		Screwdrvier - Crosshead
Step 6	Unscrew the two screws on LED module with a cross screwdriver, pull out the wiring port, and take out the LED module		Screwdrvier - Crosshead
Step 7	LED MODULE		
Step 8			