








1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS00001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	BD05C-YON-10P-G, BD05C-YON-20P-G, BD05C-YON-30P-G, BD05C-YON-50P-G, BD05C-YON-20P-W, BD05C-YON-30P-W
4		Light sources maker model	BD05C-YON-10P-G, BD05C-YON-20P-G, BD05C-YON-30P-G, BD05C-YON-50P-G, BD05C-YON-20P-W, BD05C-YON-30P-W

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
Step 1	Use a cross screwdriver to remove the screws securing the cover.		Cross screwdriver
Step 2	Remove the glass plate and silicone ring by hand.		By hand
Step 3	Remove the reflector, then press down on the PC cover with both hands to make it fall off		By hand
Step 4	Using a tweezer to hold one side of the plug-in terminal and pull it out, then pull the wire out of it, then use an adjustable wrench to remove the sensor connector, and then remove the sensor from the heat sink		Tweezer, adjustable wrench
Step 5	Using an adjustable wrench to remove the connection between the waterproof connector and the shell.		Adjustable wrench
Step 6	Using an Allen wrench to remove the bracket		Allen wrench
Step 7	Using a cross screwdriver to remove the light source board		Cross screwdriver