^	1 00	LIGHT SOURCE REMOVING INSTRUCTION	Creation date (dd/mm/yyyy) :	24/9/2022
_	Z QUA	LLITY	Last update date (dd/mm/yyyy) :	24/9/2022
1	ition	Supplier's name or trade mark	INSPIRE	
2	forma	Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN	
3	eral in	Model Identifier - Luminaire Supplier reference	5618008125	
4	Gene	Light sources maker model	5618008125M	

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

_	Explaination of the step	Pictures	Tools
Step 1	Use a cross screwdriver to unscrew the screw, pull the cloth belt to remove the plastic plate, and remove the connector		Screwdrvier - Crosshead
Step 2	Take out the screw silicone plug cover, unscrew the screws with a cross screwdriver, and take out the diffuser		Screwdrvier - Crosshead
Step 3	Use a cross screwdriver to unscrew the screw, loosen the inductor and remove the ground wire; Open the movable terminal and take out the sensor		Screwdrvier - Crosshead
Step 4	Use a hex wrench to unscrew the screws and remove the base		hex wrench
Step 5	Use a cross screwdriver to unscrew the screws, pull out the LED MODULE, remove the connector, and take out the LED and the driver module		Screwdrvier - Crosshead
Step 6	LED Module, driver module, sensor		
Step 7			
Step 8			