LIGHT SOURCE REMOVING INSTRUCTION			Creation date (dd/mm/yyyy): 29/0	9/2022
			Last update date (dd/mm/yyyy): 29/0	9/2022
1	tion	Supplier's name or trade mark	ADEO Services	
2	Iforma	Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN	
3	General in	Model Identifier - Luminaire Supplier reference	OS-ALGOA-1PIR	
4		Light sources maker model	TL1607-2	

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

_	Explaination of the step	Pictures	Tools
Step 1	1. Loosen the six screws on the back of the lamp body with a screwdriver 2. Take out the lamp cover		screwdriver
Step 2	1. Loosen the six screws on the back of the lamp body with a screwdriver 2. Take out the lamp cover		screwdriver
Step 3	1. Loosen the LN terminal screw with a screwdriver and pull out the LN electronic wire		screwdriver
Step 4	1. Use a screwdriver to loosen the lock light board screws 2. Take out the light board		screwdriver
Step 5			
Step 6			
Step 7			

Step 8		
Step 9		
Step 10		