






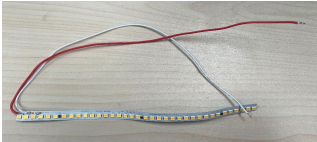


1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS00001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	JA60A260RDSN2740K -3
4		Light sources maker model	JA60A260RDSN2740K -3

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
Step 1	Remove the spring by hand.	 	By hand
Step 2	Turn the screw counterclockwise with a $\phi 5$ cross screwdriver. Take down the back.	 	$\phi 5$ cross screwdriver
Step 3	Remove the optical element.		By hand
Step 4	Use electric soldering iron to solder the output wire.		Electric soldering iron
Step 5	Remove the light source module from the ring.		By hand
Step 6	Weld the power cord to the light source board (S4+,S3-/B-). Then the light source module is flattened and leveled on the heat dissipation parts under the same heat dissipation conditions as the surface ring.		Electric soldering iron