

LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :

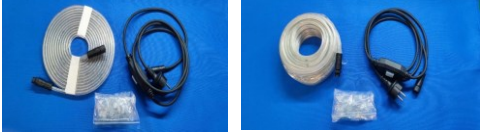
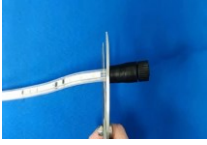
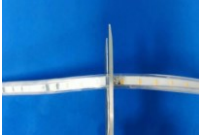


2023/8/10

Last update date (dd/mm/yyyy) :

2023/8/10

1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	HV2128K-DB-40K
4		Light sources maker model	HV2128K-10M-40K, HV2128K-5M-40K, HV2128S-5M-40K

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
Step 1	The whole product		
Step 2	Cut from the terminal of the light strip		Scissors
Step 3	Cut the 1m module with scissors		Scissors
Step 4	The light source		
Step 5	Driver		
Step 6			
Step 7			
Step 8			
Step 9			
Step 10			