^) a	LIGHT SOURCE REMOVING INSTRUCTION	Creation date (dd/mm/yyyy) : 10/05/2024		
QUALITY			Last update date (dd/mm/yyyy) : 10/05/2024		
1	tion	Supplier's name or trade mark	INSPIRE		
2	nforma	Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN		
3	ral ir	Model Identifier - Luminaire Supplier reference	G18082		
4	Gene	Light sources maker model	G18082-FGL-MZ-2835-D		

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing $\frac{1}{2}$

	Explaination of the step	Pictures	Tools
Step 1	Disassemble the fixing screws	OI OI OI Hasseshle the Beautit try Warming Mines	by hand
Step 2	Disassemble the plastic tray	d'i	by hand
Step 3	Disassemble the terminal block	Disassemble the scree	by hand
Step 4	Press	Press 2 pull out the vires	by hand
Step 5	Pull out the wires		by hand
Step 6	Disassemble the line pressing buttons	Disassemble the line pressing buttons	by hand
Step 7	Disassemble the fixing screws	Steve seals: Sales Steve	by hand
Step 8	Disassemble the inner cap		by hand
Step 9	Disassemble the fixing screws	Disamedic de distress	by hand
Step 10	Disassemble the diffuser	Name (18)	by hand
Step 11	Disassemble the fixing screws	Inc. Superstate to write to a series Q Q Q	by hand
Step 12	Disassemble the moudle	Planta of the state of the stat	by hand
Step 13	Eelctrocautery/iron melt/welding spots	(6) Illustrationary (1) Insurance (2) Marine service (3) Marine service (4) Marine service (4) Marine service (5) Marine service (6) Marine servic	by hand
Step 14	Pull out the wires	I I ② not one discretize	by hand