LIGHT SOUT		LIGHT SOURCE REMOVING INSTRUCTION	Creation date (dd/mm/yyyy) : 29/04/202	21
		ALITY	Last update date (dd/mm/yyyy) : 10/05/202	23
1	General information	Supplier's name or trade mark	INSPIRE	
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN	
3		Model Identifier - Luminaire Supplier reference	G18082	
4		Light sources maker model	G18082-FGL-MZ	

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explaination of the step	Pictures	Tools
Step 1	Disassemble the fixing screws	01 Elementation of the branch back	by hand
Step 2	Disassemble the plastic tray	ro -	by hand
Step 3	Disassemble the terminal block	Discussible the screw	by hand
Step 4	Press	Image: Open set of the set of	by hand
Step 5	Pull out the wires		by hand
Step 6	Disassemble the line pressing buttons	05 Disassemble the line pressing hattons The first server as Baranaka be inversed	by hand
Step 7	Disassemble the fixing screws		by hand
Step 8	Disassemble the inner cap		by hand
Step 9	Disassemble the fixing screws	Del Researche de difference Researche de la construction Researche de la c	by hand
Step 10	Disassemble the diffuser		by hand
Step 11	Disassemble the fixing screws	Distances to action	by hand
Step 12	Disassemble the moudle		by hand
Step 13	Eelctrocautery/iron melt/welding spots	08 Unserver hotors early whether we have a second secon	by hand
Step 14	Pull out the wires	$\left \left\{ 1 \left(2 \right)^{\text{tot out first setses}} \right. \right. \right.$	by hand