^	) a	LIGHT SOURCE REMOVING INSTRUCTION	Creation date (dd/mm/yyyy) : 29/04/2021	
	A Qui	ALIIY	Last update date (dd/mm/yyyy) : 10/05/2023	
1	tion	Supplier's name or trade mark	INSPIRE	
2	ıforma	Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN	
3	ral ir	Model Identifier - Luminaire Supplier reference	G18082WH	
4	Gene	Light sources maker model	G18082-FGL-MZ	

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explaination of the step	Pictures	Tools
Step 1	Disassemble the fixing screws		by hand
Step 2	Disassemble the plastic tray	Total about the Control of Contro	by hand
Step 3	Disassemble the terminal block	Timestr to un	by hand
Step 4	Press	Dress Department the	by hand
Step 5	Pull out the wires		by hand
Step 6	Disassemble the line pressing buttons	① Disassemble the line pressing	by hand
Step 7	Disassemble the fixing screws	Somewhat Control of the Control of t	by hand
Step 8	Disassemble the inner cap		by hand
Step 9	Disassemble the fixing screws	The state of the s	by hand
Step 10	Disassemble the diffuser		by hand
Step 11	Disassemble the fixing screws		by hand
Step 12	Disassemble the moudle		by hand
Step 13	Eelctrocautery/iron melt/welding spots	(B) Francisco	by hand
Step 14	Pull out the wires		by hand