_	Q a	LIGHT SOURCE REMOVING INSTRUCTION	Creation date (dd/mm/yyyy) : 24/09/2021	
			Last update date (dd/mm/yyyy) : 24/09/2021	
1	tion	Supplier's name or trade mark	INSPIRE	
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN	
3	nera	Model Identifier - Luminaire Supplier reference	NTL014PIR-LI	
4		Light sources maker model	04NTL014D-01-01E	

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explaination of the step	Pictures	Tool
Step 1	Open with a flat-head screwdriver.	8	
Step 2	Crack the bottom shell with tongs		
Step 3	Use a Phillips screwdriver to unscrew the lamp board and pull it out		
Step 4	Remove the tin from the lamp board with a tin- stained iron.		
Step 5	Install the new indicator board and lock the indicator board with a Phillips screwdriver		
Step 6	Use a tin-stained iron to solder the lamp board.		
Step 7	Put the lens and the bottom cover in position, and then apply force to the assembly		

Step 8 Put the light and lens in position before assembling