


EXPLODED VIEW WITH PARTS LIST

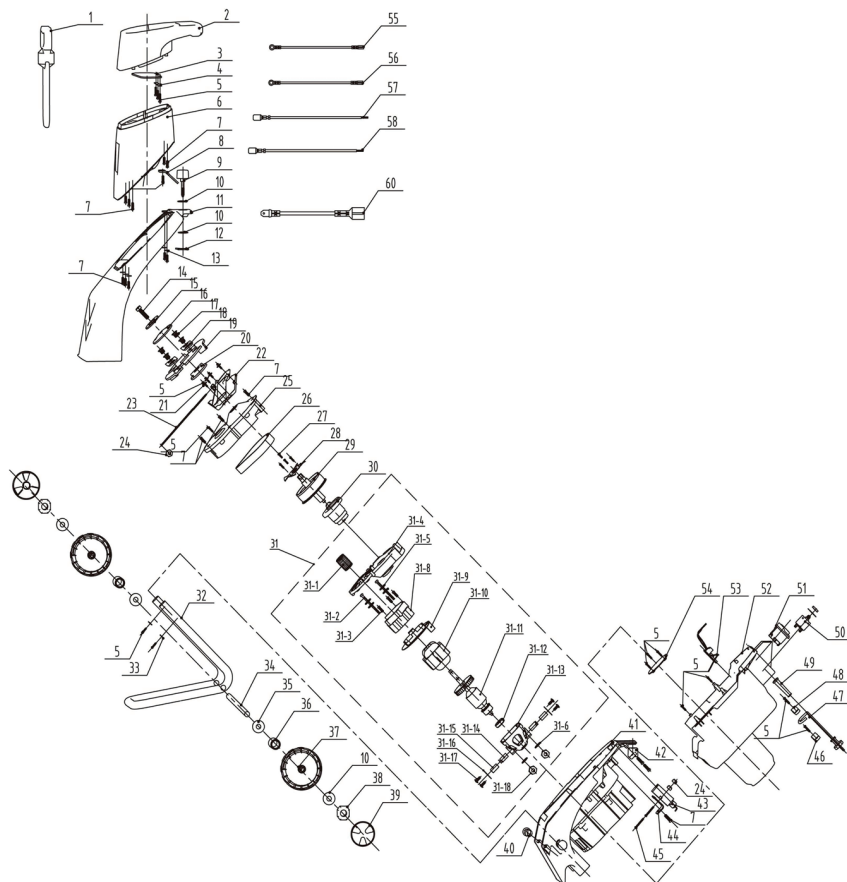

EN

EXPLODED VIEW WITH PARTS LIST

Part no.	Description	Part no.	Description
1	Plunge rod	31-11	Rotor
2	Feeder hopper	31-12	Bearing
3	Splash guard	31-13	Motor rear support
4	Press bar	31-14	Carbon brush
5	Screw	31-15	Brush holder
6	Upper housing	31-16	Brush holder clamp
7	Screw	31-17	Screw
8	Switch pin	31-18	Nut
9	Knob	32	Support base
10	Washer	33	Washer
11	Lower housing	34	Fix rod
12	Forelock	35	Washer
13	Washer	36	Support sleeve
14	Screw	37	Wheel
15	Washer	38	Nut
16	Spacer	39	Protection sleeve
17	Screw	40	Plastic pin
18	Blade	41	Motor base
19	Static blade	42	Fixed nut
20	Transmission shaft	43	Switch
21	Washer	44	Switch fixed board
22	Dust against plate	45	Screw
23	Pull rod	46	Cable wire
24	Nut	47	Electric wire
25	Reduce box upper cover	48	Cable clamp
26	Belt	49	Cable sleeve
27	Screw	50	Overcurrent protection
28	Helix	51	Switch
29	Big belt pulley	52	Motor box
30	Eccentric wheel	53	Soft start
31	Motor assembly	54	Dustproof board
31-1	Small belt pulley	55	Connecting wire
31-2	Stator screw	56	Connecting wire
31-3	Screw	57	Connecting wire
31-4	Reduce box lower cover	58	Connecting wire
31-5	Washer	60	Connecting wire
31-6	Washer		
31-8	Motor front support		
31-9	Wind screen		
31-10	Stator		

EN