


# 8.EXPLODED VIEW WITH PARTS LIST

EN

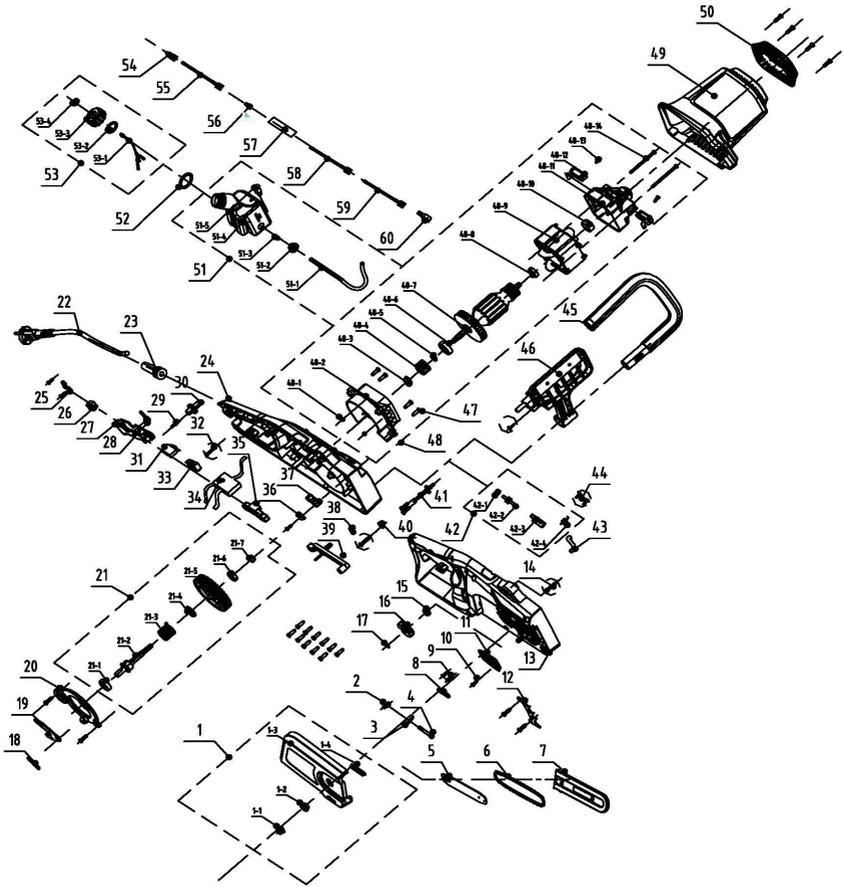

## 8.EXPLODED VIEW WITH PARTS LIST

POS	DESCRIPTION	POS	DESCRIPTION	POS	DESCRIPTION
1	End cap assy	25	Pressing plate	48-8	Bearing
1-1	Nut	26	Terminal board	48-9	Stator
1-2	Axle sleeve	27	Switch button	48-10	Sleeve
1-3	End cap	28	Spring	48-11	Motor back bracket
1-4	Seal ring of end cap	29	Spring	48-12	Carbon brush & holder assy
2	Nut	30	Self-locking button	48-13	Screw
3	Gasket	31	Capacitor	48-14	Screw
4	Screw	32	Screw	49	Motor cover
5	Bar	33	Switch	50	Decoration cover
6	Chain	34	PCB	51	Oil tank assy
7	Bar sleeve	35	Rod	51-1	Oil tube
8	Seal ring	36	Pressing plate	51-2	Sealing ring
9	Screw	37	Fixing plate	51-3	Spring
10	Screw	38	Spring	51-4	Oil tank
11	Gasket	39	Switch rod assy	51-5	Valve
12	Buffer board	40	Gasket	52	Rubber pad
13	Right housing	41	Oil nozzle assy	53	Oil tank cap assy
14	Screw	42	Oil pump assy	53-1	Anti-lost ring
15	Spring	42-1	Turbine gear	53-2	Seal ring
16	Sprocket	42-2	Turbine	53-3	Oil tank cap
17	E-ring	42-3	Oil pump	53-4	Oil tank cap cover
18	Spring	42-4	Spring	54	Female terminal
19	Brake plate	43	Oil tube	55	Connection wire
20	Anti-dust cover	44	Screw	56	Copper strip
21	Output shaft assy	45	Front handle	57	Heat-shrinkable tube
21-1	Bearing	46	Chain brake	58	Connection wire
21-2	Output shaft	47	Screw	59	Connection wire
21-3	Brake torsion spring	48	Motor assy	58	Connection wire
21-4	Axle sleeve	48-1	Nut	60	male terminal
21-5	Output shaft gear	48-2	Wind deflector		
21-6	Bearing	48-3	Nut		
21-7	Nut	48-4	Motor gear		
22	Cable/plug	48-5	Gear sleeve		
23	Cable sleeve	48-6	Bearing		
24	Left housing	48-7	Rotor		