



- |                                 |                                 |
|---------------------------------|---------------------------------|
| 1. ( frame )                    | 2. ( PC Cover )                 |
| 3. ( rubber ring )              | 4. ( PC reflector )             |
| 5. ( LED PCB Board )            | 6. ( screws )                   |
| 7. ( PCB control board )        | 8. ( USB output switch button ) |
| 9. ( capacity indicator light ) | 10. ( Mounting plate )          |
| 11. ( small rubber ring )       | 12. ( back housing )            |
| 13. ( plastic knob base A )     | 14. ( plastic knob base B )     |
| 15. ( plastic knob )            | 16. ( cotter pin )              |
| 17. ( metal tube )              | 18. ( thumb screw )             |
| 19. ( plastic stopper )         | 20. ( rubber ring )             |
| 21. ( waterproof cover )        | 22. ( Li battery )              |
| 23. ( back housingcover )       | 24. ( screws )                  |
| 25. ( screws )                  | 26. ( switch base )             |
| 27. ( silica switch button )    | 28. ( needle axis )             |
| 29. ( screws )                  | 30. ( front side of handle )    |
| 31. ( metal tube A )            | 32. ( back side of handle )     |
| 33. ( screws )                  |                                 |