


46L

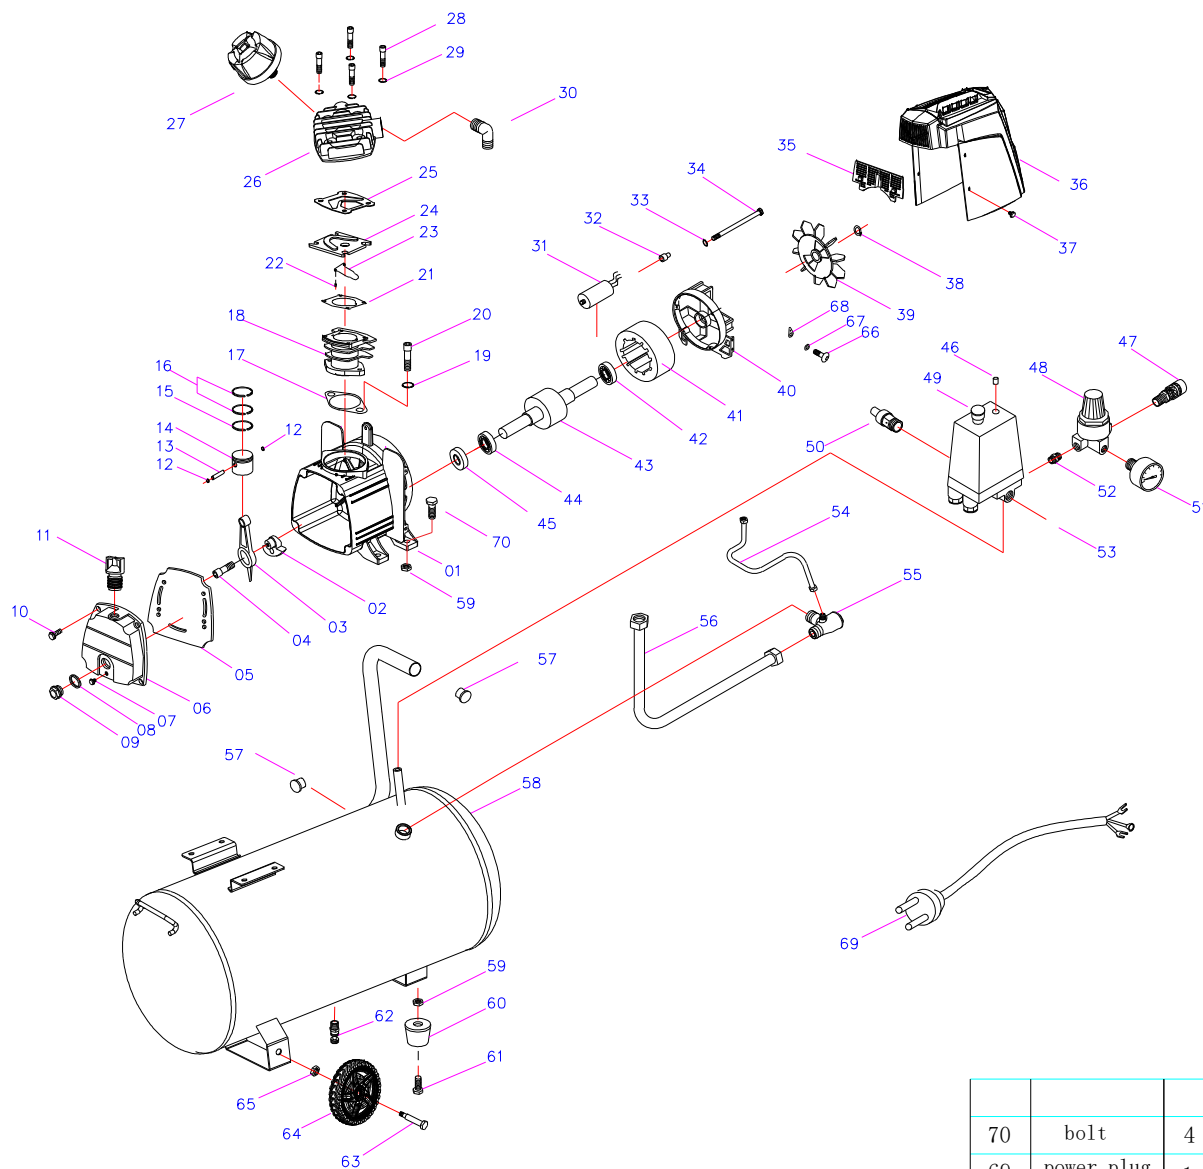

70	bolt	4	36	protective cover	1	02	crank shaft	1
69	power plug	1	35	baffle	1	01	crankcase	1
NO.	Name	QTY	NO.	Name	QTY	NO.	Name	QTY

68	spring washer	1	34	bolt	4
67	serrated washer	1	33	spring washer	4
66	bolt	1	32	terminal cap	2
65	nut	2	31	capacitance	1
64	wheel	2	30	elbow	1
63	bolt	2	29	spring washer	4
62	blow-down valve	1	28	bolt	4
61	bolt	1	27	air filtration chip	1
60	cushion pad	1	26	cylinder head	1
59	nut	5	25	sealing gasket	1
58	tank	1	24	valve plate	1
57	chock plug	2	23	valve slice	1
56	Exhaust pipe	1	22	pin	2
55	one-way valve	1	21	sealing gasket	1
54	unloading pipe	1	20	bolt	2
53	chock plug	1	19	spring washer	2
52	connection	1	18	cylinder	1
51	pressure gage	1	17	sealing gasket	1
50	safety-valve	1	16	gaseous ring	2
49	pressure switch	1	15	oilring	1
48	pressure regulating valve	1	14	piston	1
47	quick coupling	1	13	piston pin	1
46	chock plug	1	12	circlip	2
45	oil seal	1	11	respirator	1
44	bearing	1	10	bolt	4
43	rotor	1	09	oil immersion lens	1
42	bearing	1	08	seal ring	1
41	stator	1	07	bolt	1
40	backseat	1	06	side cover	1
39	fan	1	05	oil baffle plate	1
38		1	04	bolt	1
37	bolt	4	03	connecting rod	1
36	protective cover	1	02	crank shaft	1
35	baffle	1	01	crankcase	1