



OPERATION

Modes and Features

	High Spot		High Flood (Wide)		Warm Mode		Red	X	Area High
	Medium Spot		Medium Flood (Wide)		Cool Mode		Red Flashing		Area Medium
	Low Spot		Low Flood (Wide)		Warm and Cool Together		Green	X	Area Low
	Ultra Low Spot		Emergency Strobe (>5hz see warning copy)				Green Flashing	X	Nightlight
X	Press and Hold Dimming		Safety Flashing <5Hz				SOS		

OPERATING INSTRUCTIONS

1. Press on/off button to turn on.
2. Press 1x for high.
3. Press 2x for low.
4. Press and hold for dimming.
5. Press 3x for nightlight.

BATTERY CHANGING or CHARGING INSTRUCTIONS

1. Battery is not user replaceable.
2. To charge use included USB cord and plug light into any USB charging port.
3. Light may be used while charging but charging time will be increased. For best charging performance, charge with light turned off.

BATTERY CHARGE INDICATOR

1. Charging Indicator light is located near charging port. Charging Indicator light flashes while charging. Charging Indicatorlight is solid when fully charged.
2. Lantern maybe used while charging but charging time will be increased. For best charging performance, charge with light turned off.
3. Lantern can be used to charge a cellphone or other portable device. Use charging cord that came with your device and plug into the large USB port on the front of the light. Lantern will only operate in low mode while using lantern to charge a device.