

740


P



Je définis les dimensions et la finition de mon portillon



Je prends mon kit (boîte au gris)

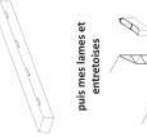


Hauteur	Lames	Entretoises
21	4	7
24	4	7
27	5	8
30	5	8
33	6	9
36	6	9
39	7	10
42	7	10
45	8	11
48	8	11
51	9	12
54	9	12
57	10	13
60	10	13
63	11	14
66	11	14
69	12	15
72	12	15
75	13	16
78	13	16
81	14	17
84	14	17
87	15	18
90	15	18
93	16	19
96	16	19
99	17	20
102	17	20
105	18	21
108	18	21
111	19	22
114	19	22
117	20	23
120	20	23
123	21	24
126	21	24
129	22	25
132	22	25
135	23	26
138	23	26
141	24	27
144	24	27
147	25	28
150	25	28
153	26	29
156	26	29
159	27	30
162	27	30
165	28	31
168	28	31
171	29	32
174	29	32
177	30	33
180	30	33

Le coupe mes lames à dimensions et si besoin les traverses et montants (voir schéma à l'onglet "à l'onglet")




l'assembler

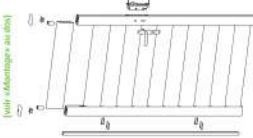

Mon portillon est prêt à poser

(Faire le voir au vendeur)

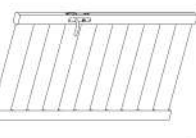

Contenu




Mise à longueur




Montants PVC/Alu, profils de finition



Montage

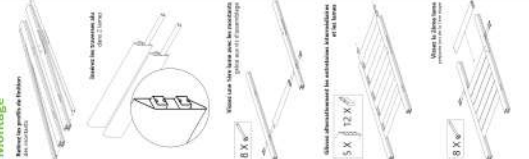

Pose

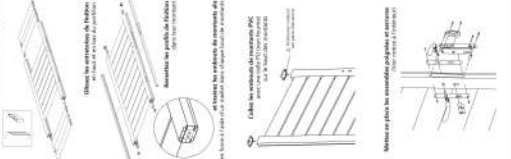

176

100

180

104

180

1770