


- Fixed heaters are to be installed so that switches and other controls cannot be touched by a person in the bath or shower.
 - The heater must be installed at least 1.8 m above the floor.
 - **WARNING:** The heater must not be used if the ceramic panels are damaged.
 - Concerning the instruction for installation and electrical connection, please refer to the paragraph below.
 - Warning: this product shall be installed only according to the national wiring rules, and in the white area (fig. 01).
- Note: The drawing is for reference only. We suggest that you to contact a professional electrician for assistance.

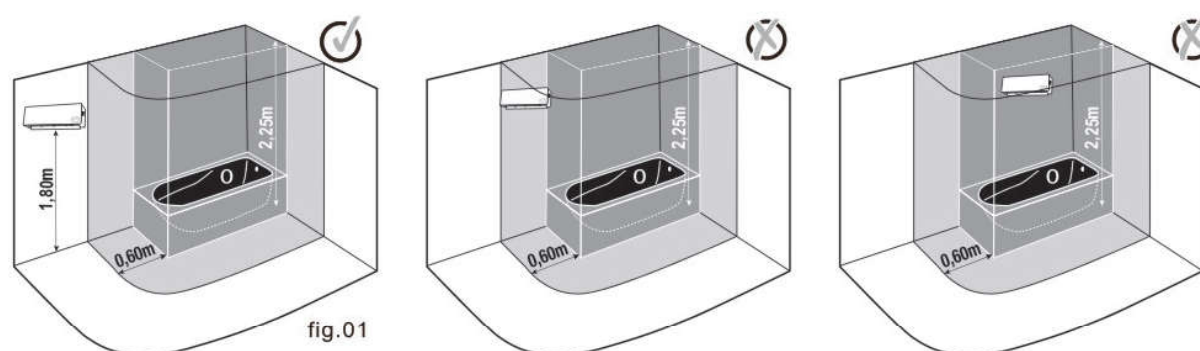

2. INDOOR USE ONLY

To hang you heater on the wall:

- Drill two holes at the level of the slots located at the back of the heater then put two pegs in the holes.
- Hang the heater to the wall by inserting the two screws into the slots of the back panel of the heater the fix the screws on the pegs.
Always be sure that the heater is correctly fixed and stable after performing the installation.
- Let a minimum safety distance of 20 cm between each side of the heater and any obstacle.

3. CLEANING & MAINTENANCE

- Switch off from the power supply before cleaning.
- Using a soft, moist cloth, with or without a mild soap solution, carefully clean the exterior surface of the product.
- CAUTION: Allow the product to completely cool before handling or cleaning it.
- Do not allow water or other liquids to run into the interior of the product, as this could create a fire and/or electrical hazard.
- We also recommend the periodic cleaning of this appliance by lightly running a vacuum cleaner nozzle over the guards to remove any dust or dirt that may have accumulated inside or on the unit.
- CAUTION: Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the plastic components.

4. DISPOSAL AND RECYCLING



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

KPT-2000C 0505L-IPE

220-240V~ 50Hz

1800W

IP22



Information requirements for electric local space heaters


Model identifier(s): KPT-2000C 0505L-IPE					
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P_{nom}	1,8	kW	manual heat charge control, with integrated thermostat	[no]
Minimum heat output (indicative)	P_{min}	1,1	kW	manual heat charge control with room and/or outdoor temperature feedback	[no]
Maximum continuous heat output	$P_{max,c}$	1,8	kW	electronic heat charge control with room and/or outdoor temperature feedback	[no]
Auxiliary electricity consumption				fan assisted heat output	[no]
At nominal heat output	el_{max}	0	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	el_{min}	0	kW	single stage heat output and no room temperature control	[no]
In standby mode	el_{sb}	0,001	kW	Two or more manual stages, no room temperature control	[no]
				with mechanic thermostat room temperature control	[no]
				with electronic room temperature control	[no]
				electronic room temperature control plus day timer	[no]
				electronic room temperature control plus week timer	[yes]
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	[no]
				room temperature control, with open window detection	[yes]
				with distance control option	[no]
				with adaptive start control	[no]
				with working time limitation	[yes]
				with black bulb sensor	[no]
Contact details	ADEO Services 135 Rue Sadi Carnot – CS 00001 59790 RONCHIN - France				

<http://www.erp-equation.com/heaters>

5. HOW TO USE

Function operation on unit

1. Plug in and switch on by pressing the red switch 0/I, enter into standby mode and display shows "00:00 / 1".

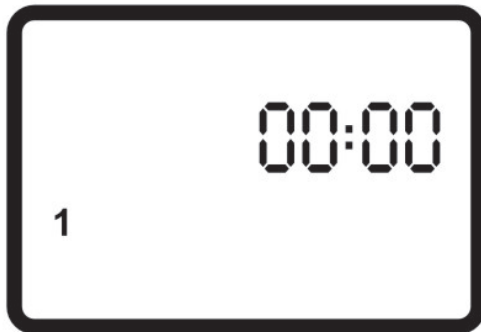

2. Press "F" button, enter into fan mode and display shows "-- / 00:00/1".



3. Press "F" button again, the product works with low heating (1100W) and display shows "-- / ☀". Press third time, changes to high heating (1800W) and display shows "-- / ☀☀", then press fourth, enter into swing and display shows "-- / ☀☀ / ⇌", Press fifth time, enter into ion and display show "-- / ☀☀ / ⇌ / ION", Press once again, change to stand by.



4. Press "⌚" button to set timer (00-12 hours). Pressing the button one time increases one hour for timer. After setting time, the display will

show current setting time for 5 seconds, then resume to previous display, meanwhile the light of "⌚" will on. Below photo is an example of setting 8h:



5. Apointment "ON": In standby mode, press "⌚" timer button, you can set the appointment turn-on time in 00-12 hours. After complete setting, the display shows the appointment turn-on time and also the light "⌚" is on. The display automatically decreases 1 hour for each hour passed. When the appointment power-on time arrived, the product will automatically turns on. Below photo is an example of setting 8h:



Note: If not setting the temperature and weekly program, the product will automatically turn-off after 12 hours of continuous work, and enter into standby.

Function operation (ONLY by remote control)

1. Press "⌚" button, product working while fan function, the display "--"
2. Press "⌚" button, for one time, the product works with low heating (1100W) and display shows "-- / 🔥". Press again, changes to high heating (1800W) and display shows "-- / 🔥🔥";

3. Press "⏮" button to set swing function and display shows "⏮", press again, will stopped;
4. Press "ION" button, product working while ion function and lighted "ION";
5. Press "💡" button, the light is lighted;
6. Press "🕒" button to set timer(00-12hours). Pressing the button one time increases one hour for timer. After setting time, the display will show current setting time for 5 seconds, then resume to previous display, meanwhile the light of "🕒" will on.

Set current TIME/DAY (can set both under standby mode & working status):

1. Press "SET" button for one time, the display shows "00" as default, press "+" / "-" to set current hour; press "SET" again, the display shows minute "00", press "+" / "-" to set current minute, then press "SET" for third time, the display shows the day "1", press "+" / "-" to set current day. Then press "OK" to confirm the setting, the display will show previous settings.
For example: During II heating(25°C), make setting to, 9:30 AM of Wednesday, pls. refer to the following photos:



Note:

- The above setting was continue to memorized after power off, then press "SET" to check the current time & day in turn.
- The timer is in 24 hours.
- 00~59 minutes.
- If Setting the time, the product show setting time, not current time.

2. Set temperature

During working status, Press "⊕ / ⊖", the display shows "23" as default. Press "⊕ / ⊖" to set desired temperature (temperature range 5-35°C), press "OK" to confirm the setting.

For example: The current ambient temperature is 15°C, when set target temperature to 25°C, the display shows as below:



Note:

When setting temperature, it will use SMART working way:

1) Setting temperature – ambient temperature > 2°C, working with high power-1800W;

2) 0°C < Setting temperature – ambient temperature = < 2°C, working with low power-1100W;



3) Setting temperature – ambient temperature = 0°C, the cool fan will work for 30 seconds to blow out the heating left inside, then enter into standby mode.

4) after enter into standby mode, if the machine cool down and: Setting temperature – ambient temperature ≥ 2°C, the machine will wake up and resume to heating.


If you want to cancel the setting temperature, press "⏏" key to choose the heating I or II, the product will work without setting temperature. While the display "°C" will go off, and will show "--". After continuous heating for 12 hours, the cool fan will work for 30 seconds and enter into standby mode.

Set weekly program (ONLY by remote control)

After complete setting of current TIME/DAY, below is the steps to set weekly program:

- 1) Press "  ", the product enter into working status.
- 2) Press "  ", the display shows "P", it enter into weekly program setting:




- 3) Press "  ", the display shows 1~7, set to working day(Monday-Sunday: 1~7). Such as set Monday:





Note:

For both current day & working day:
Monday-Sunday: 1~7



- 4) Press "  ", the display shows P1~P6(for each day, it can be set maximum 6 time periods).Such as setting P1:



- 5) Press "  ", the display shows 00"as default. Press"  " continuously to set the turn-on time. Press"  " to set the minutes, increased 10min per press one time. Such as set the turn-on time 7:30am (As figure);

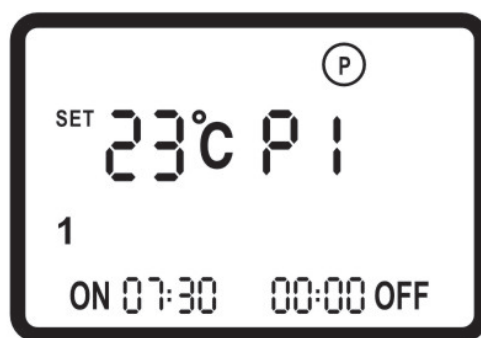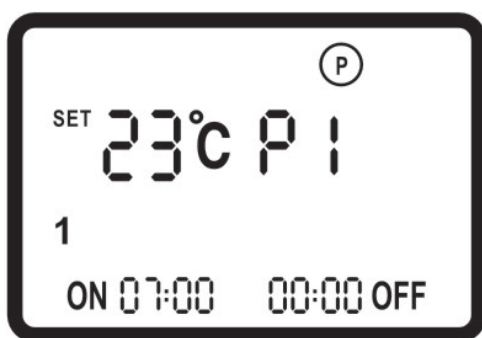

- 6) Press " ", the display shows the previous step turn-on time by default. Press " " continuously to set the turn-off time. Press " " to set the minutes, increased 10min per press one time. Such as set the shutdown time at 13:30pm:

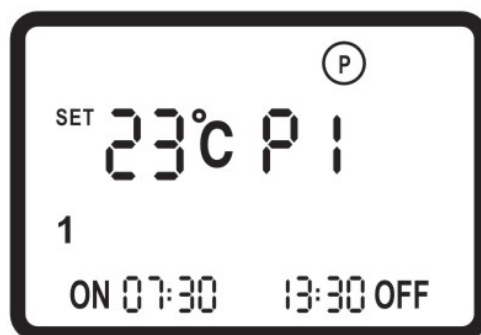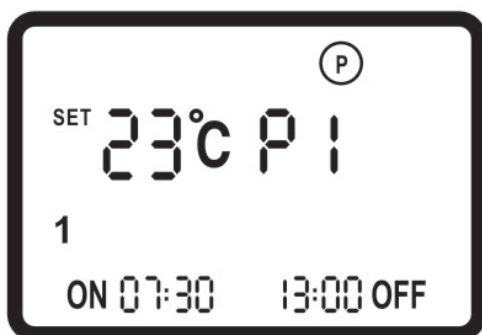

- 7) Press " / " to setting the target temperature (Temperature range 5-35°C)
- 8) Repeat steps 2-7 above, you can set the whole weekly program, then press " " to confirmed;
- 9) To cancel the weekly function, press the " " again, the light "P" will go off. The weekly program is off. The product will revert to the previous function working status.

Note:

- After the above setting are completed and P program is working, press " / / / " to check the setting time of each day and time periods.
- Press " / ", set working temperature under different time periods.
- The turn-on/off time periods 00~24hours, can set to minutes 10~50 minutes;
- The "TIME/OFF" can not be less than "TIME/ON";


- When the "TIME/ON" is the same as "TIME/OFF", the time period enter into standby mode;

Set open-window detection(ONLY by remote control):

- 1) Press "☀", the product enter into working status. Heating for a moment untill stable.
- 2) Press "☒" by remote control, light "☒ / °C" will on; The temperature display "23" by default. Press "⊕ / ⊖" to set target temperature. During open-window detection mode, once the ambient temperature drops 5-10°C within 10 minutes, then the product will stop working within 30 minutes and enter into stand by mode. Then press "☀" to turn on the product.
- 3) Press "☒" again to turn off the open-window detection, the light "☒" will go off and the product will resume to previous working mode.
Below is an example to set 23°C during open-window detection.



- 4) When turn on at the same time for both open-window detection and weekly program, during the OFF period of weekly program, the product doesn't work. During the working status of weekly program, the temperature is subject to the setting temperature of open-window detection. Below is a example:

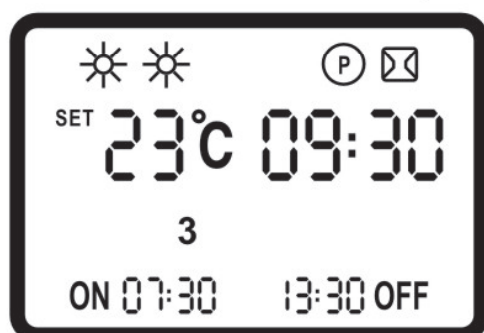

FR

Note:

ES

- Before turn on weekly program: it must set day and time period, otherwise the weekly default state is "00", which does not work.

PT

Fixed Remote control

IT

1) According to the instructions of the positive and negative poles, the remote control is equipped with lithium batteries(As figure A);

EL

2) Removed the protect paper for back of the remote control, press the support firmly against the wall of glass, porcelain plate and board to ensure that the bracket is firmly fixed(As figure B);

PL

3) When the remote control is not used, insert the remote control into the bracket (As figure C).


RO

EN




FR: Montage / ES: Montaje / PT: Montagem / IT: Montaggio / EL: Συναρμολόγηση /
PL: Montaż / RO: Montaj / EN: Assembly

1.

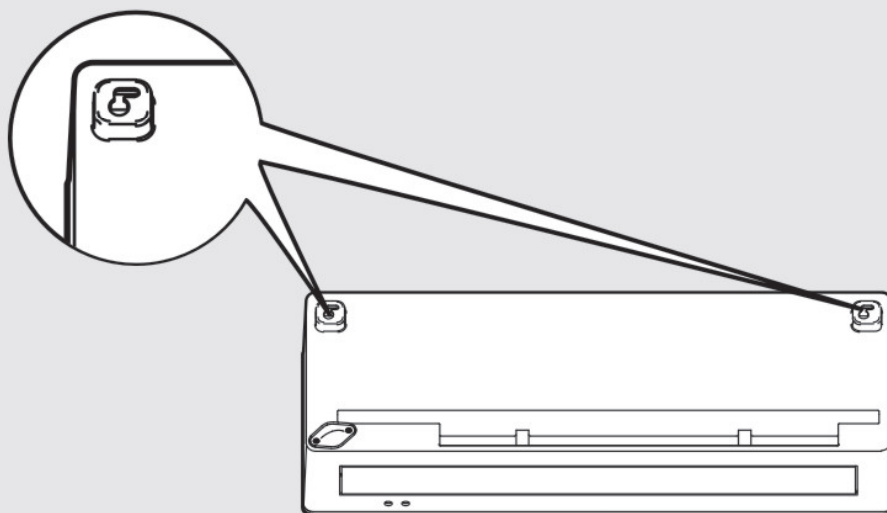


2.

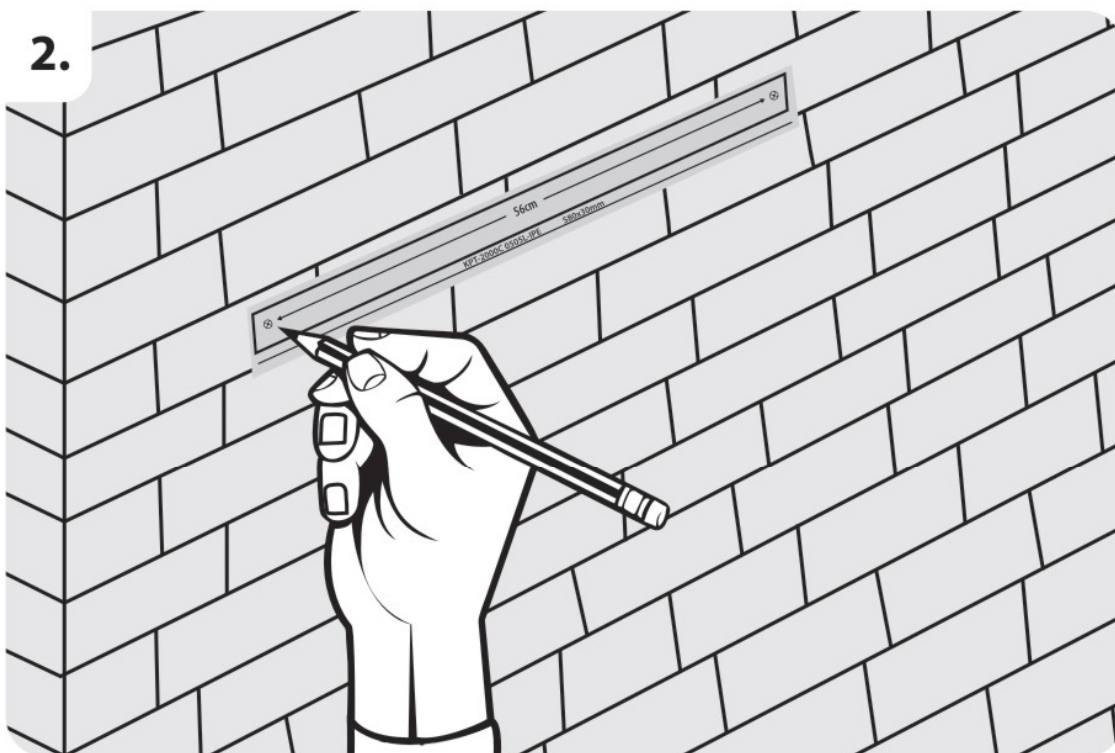




FR: Montage / ES: Montaje / PT: Montagem / IT: Montaggio / EL: Συναρμολόγηση /
PL: Montaż / RO: Montaj / EN: Assembly

3.

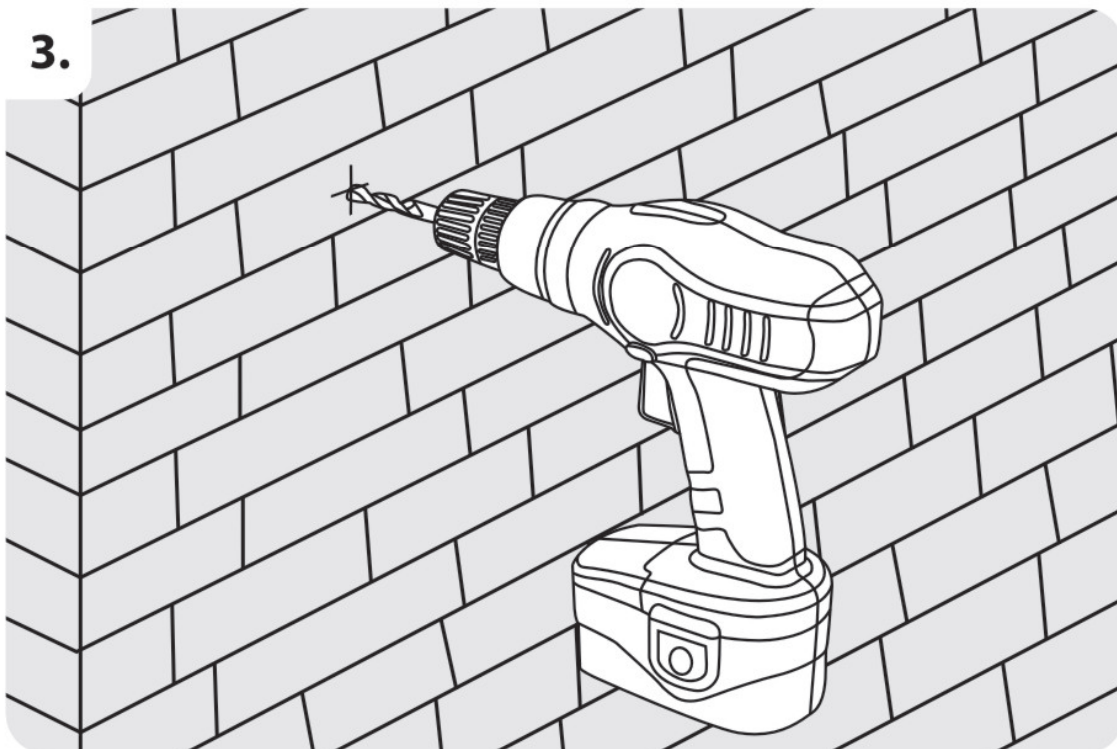


4.

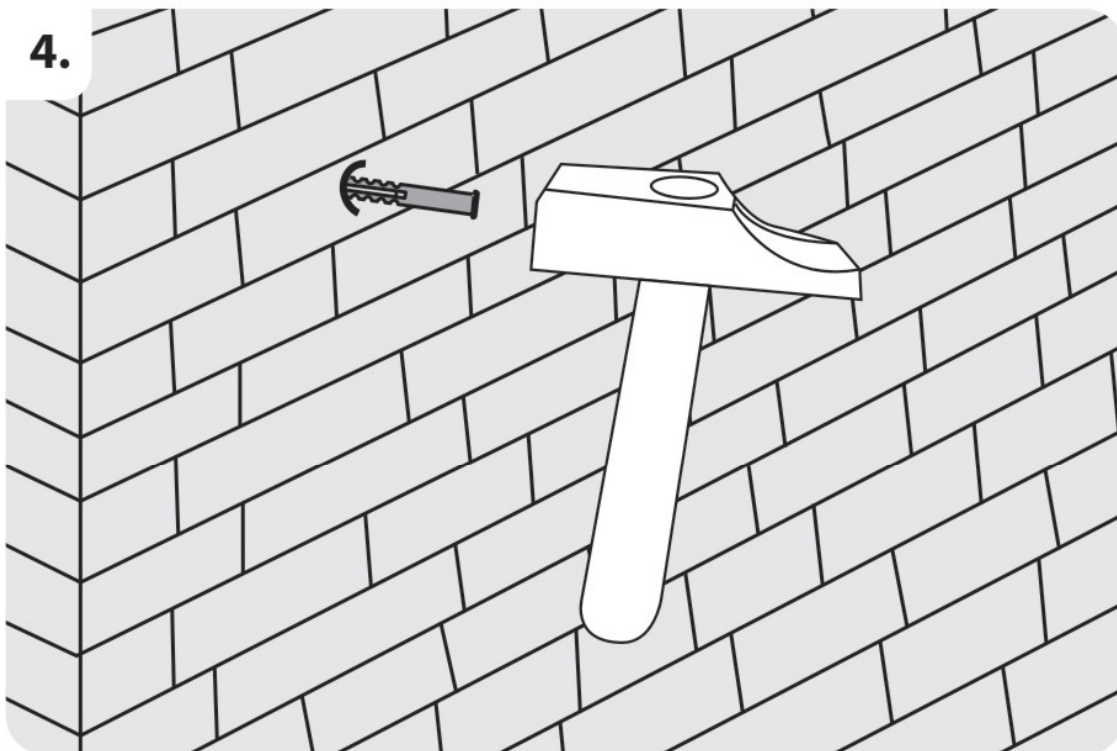




FR: Montage / ES: Montaje / PT: Montagem / IT: Montaggio / EL: Συναρμολόγηση /
PL: Montaż / RO: Montaj / EN: Assembly

5.

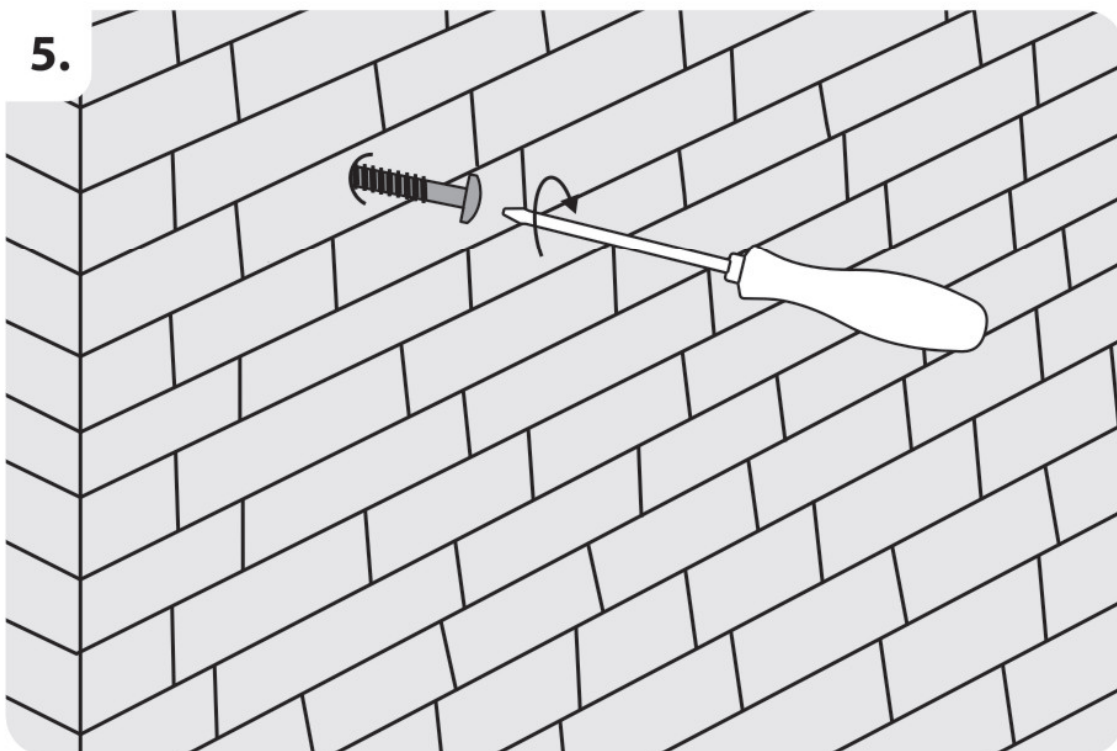


6.

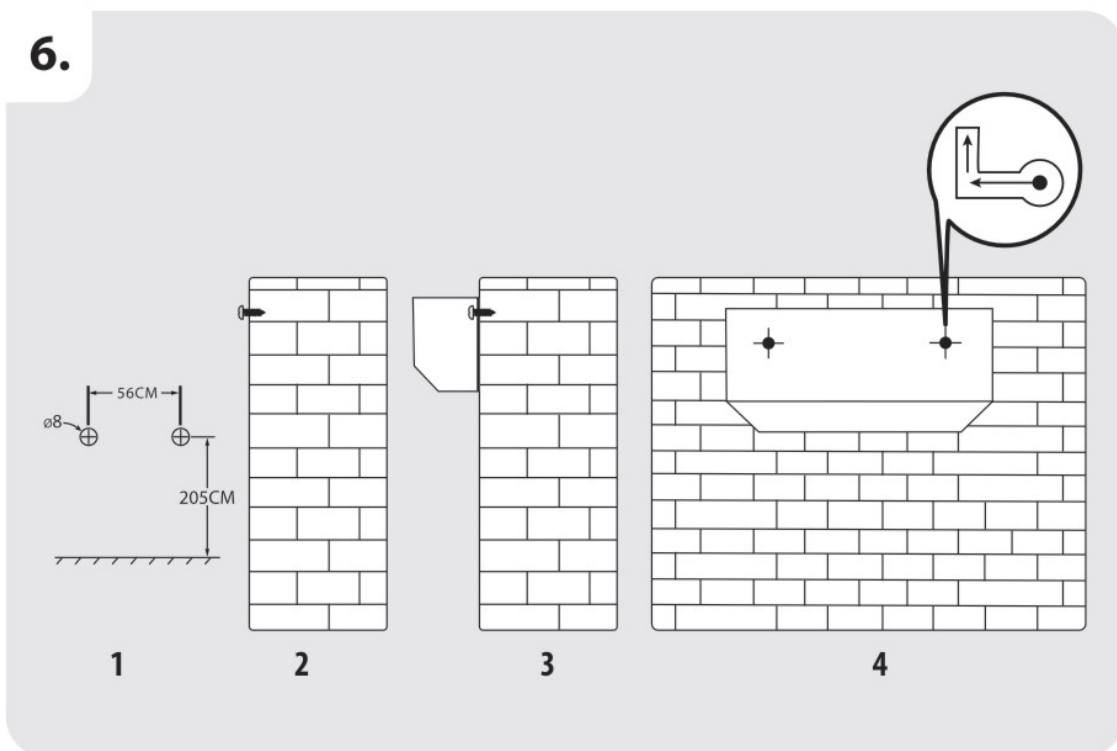




FR: Montage / ES: Montaje / PT: Montagem / IT: Montaggio / EL: Συναρμολόγηση /
PL: Montaż / RO: Montaj / EN: Assembly

7.

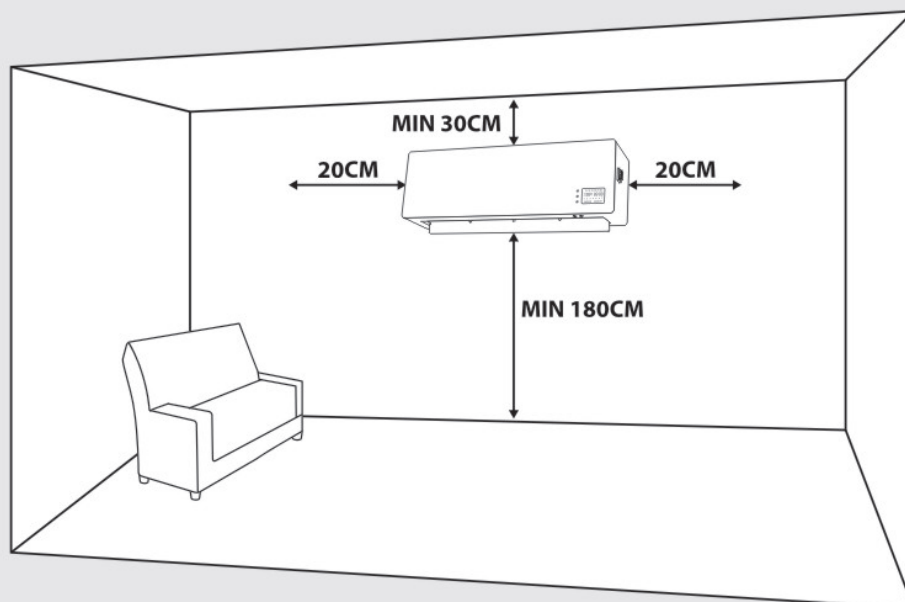



8.

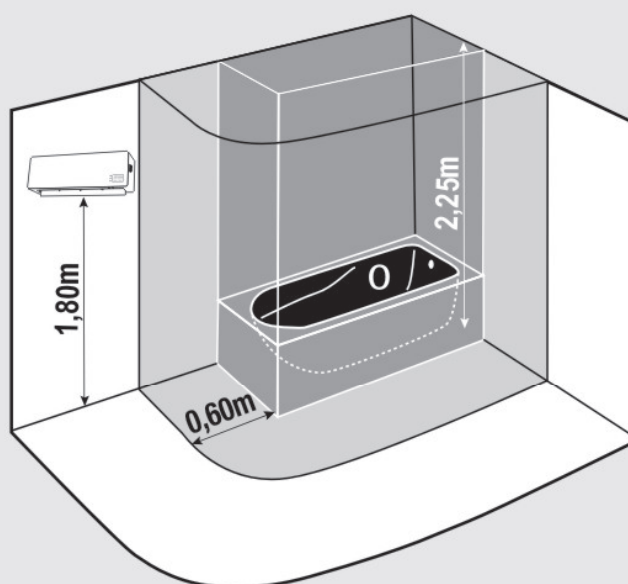



FR: Montage / ES: Montaje / PT: Montagem / IT: Montaggio / EL: Συναρμολόγηση /
PL: Montaż / RO: Montaj / EN: Assembly



9.

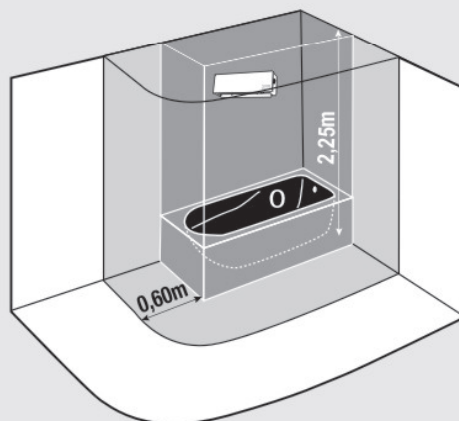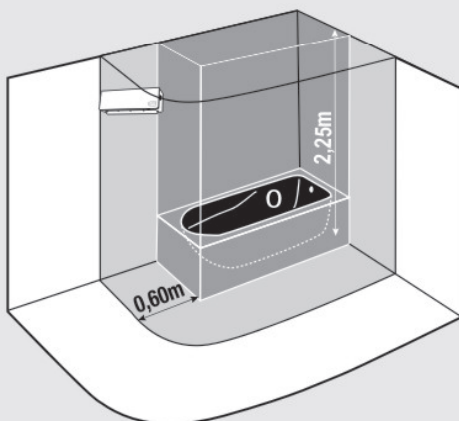



FR: Utilisation / **ES:** Utilización / **PT:** Utilização / **IT:** Uso / **EL:** Χρήση /
PL: Użytkowanie / **RO:** Utilizare / **EN:** Use



1.

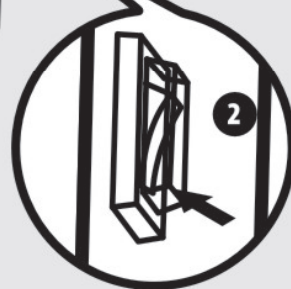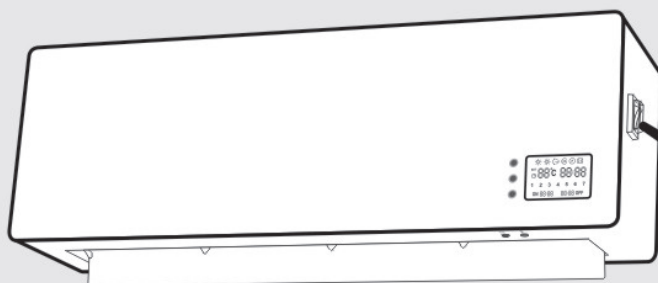



FR: Utilisation / ES: Utilización / PT: Utilização / IT: Uso / EL: Χρήση /
PL: Użytkowanie / RO: Utilizare / EN: Use


2.

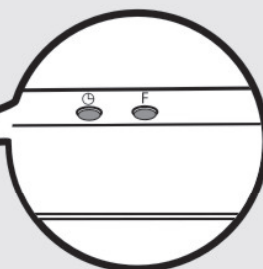

FR: Mode veille / ES: Modo de espera / PT: Modo de espera /
IT: Modalità stand by / EL: Απενεργοποιήστε τη λειτουργία / PL: Tryb czuwania /
RU: Режим ожидания / UA: Очікування за режимом / RO: Modul de așteptare / EN: Stand by mode

FR: Mode de travail / ES: Modo de trabajo / PT: Modo de trabalho / IT: Modalità di lavoro /
EL: Λειτουργία λειτουργίας / PL: Tryb pracy / RU: Режим работы / UA: Робочий режим / RO: Mod de lucru / EN: Working mode


3.

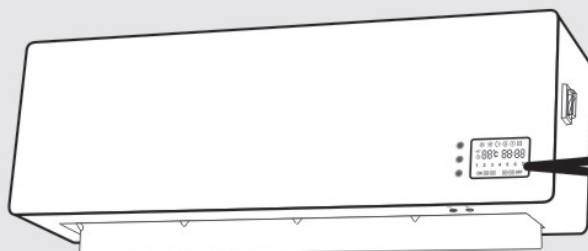



FR: Utilisation / ES: Utilización / PT: Utilização / IT: Uso / EL: Χρήση /
PL: Użytkowanie / RO: Utilizare / EN: Use

4.

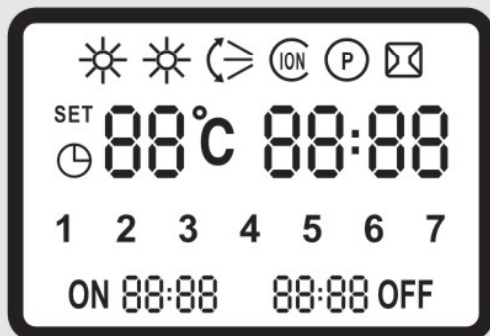


5.





FR: Utilisation / ES: Utilización / PT: Utilização / IT: Uso / EL: Χρήση /
PL: Użytkowanie / RO: Utilizare / EN: Use

6.

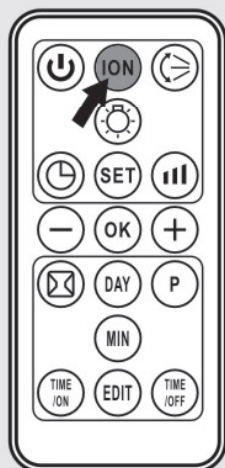

ION 1x



ION 2x

7.



➡ 1x



➡ 2x



FR: Utilisation / ES: Utilización / PT: Utilização / IT: Uso / EL: Χρήση /
PL: Użytkowanie / RO: Utilizare / EN: Use

8.




1x



2x

9.

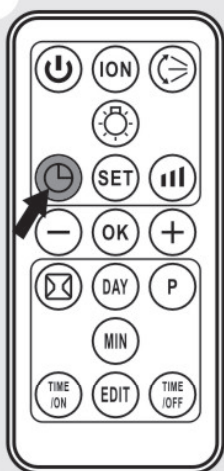

= 00-12H

FR: Mode veille / ES: Modo de espera / PT: Modo de espera / IT: Modalità stand by / EL: Απενεργοποιήστε τη λειτουργία / PL: Tryb czuwania / RU: Режим ожидания / UA: Очікування за режимом / RO: Modul de așteptare / EN: Stand by mode



= 12H

FR: Mode de travail / ES: Modo de trabajo / PT: Modo de trabalho / IT: Modalità di lavoro / EL: Λειτουργία λειτουργίας / PL: Tryb pracy / RU: Режим работы / UA: Робочий режим / RO: Mod de lucru / EN: Working mode




FR: Utilisation / ES: Utilización / PT: Utilização / IT: Uso / EL: Χρήση /
PL: Użytkowanie / RO: Utilizare / EN: Use

10.




SET → \oplus/\ominus = 00-24H;00-59Min;1-7D

11.

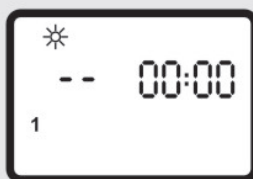

1x

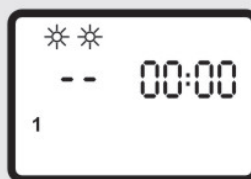

2x




3x

= 1100W/1800W/ 12H




FR: Utilisation / ES: Utilización / PT: Utilização / IT: Uso / EL: Χρήση /
PL: Użytkowanie / RO: Utilizare / EN: Use

12.

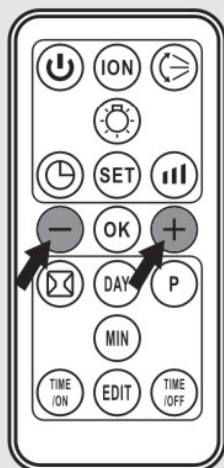

13.

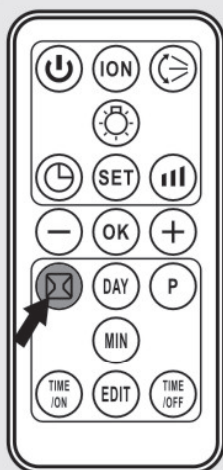

1x



2x



= FR: Détection de
fenêtre ouverte
/ EN: Open-
window
detection



= FR: Détection de
fenêtre
rapprochée / EN:
Close-window
detection



FR: Utilisation / ES: Utilización / PT: Utilização / IT: Uso / EL: Χρήση /
PL: Użytkowanie / RO: Utilizare / EN: Use

14.



1x

P = FR: Programme
hebdomadaire
ouvert / EN:
Weekly
program open



2x

P = FR: Fermeture
hebdomadaire
du programme
/EN: Weekly
program close

15.



DAY = 1-7

EDIT = FR: P1~P6= Réglage du délai /
EN: P1~P6= Setting time frame

TIME / ON & **TIME / OFF** = 00-24H


MIN = 10~50Min

OK = Confirm




FR: Utilisation / ES: Utilización / PT: Utilização / IT: Uso / EL: Χρήση /
PL: Użytkowanie / RO: Utilizare / EN: Use


16.

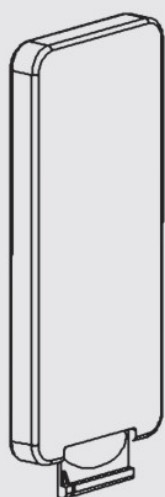

A

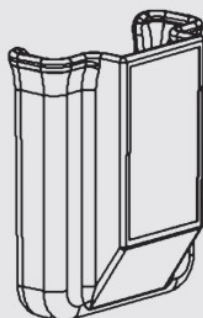


B

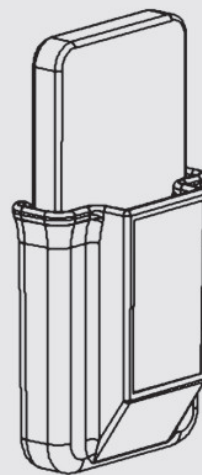

C


17.

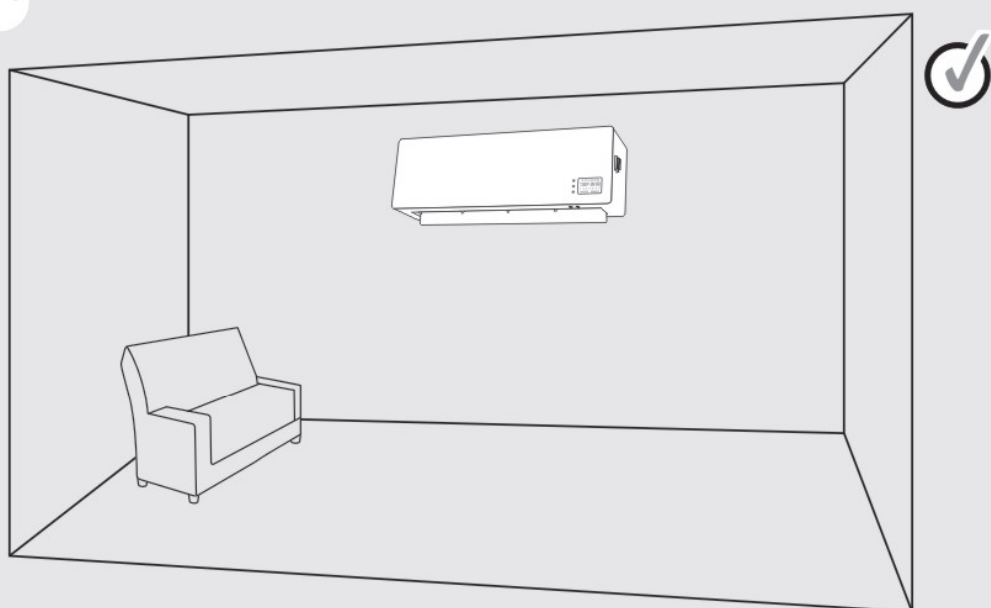



FR: Utilisation / ES: Utilización / PT: Utilização / IT: Uso / EL: Χρήση /
PL: Użytkowanie / RO: Utilizare / EN: Use


18.

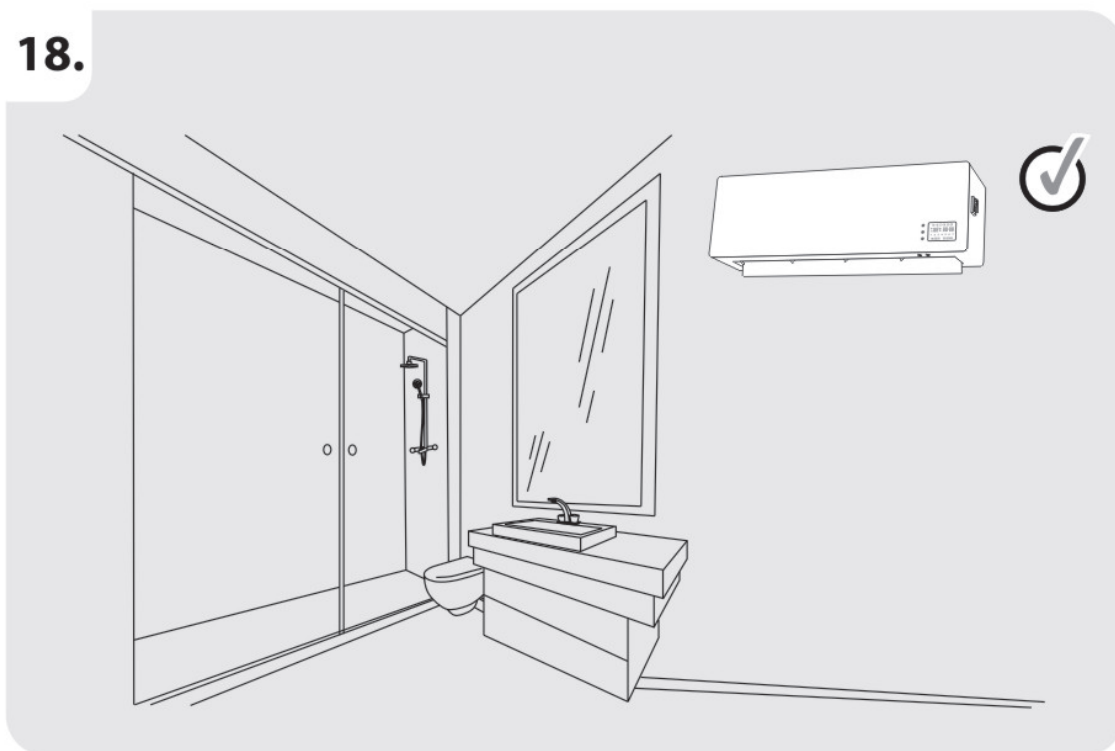




FR: Entretien / ES: Mantenimiento / PT: Manutenção / IT: Manutenzione / EL: Συντήρηση /
PL: Konserwacja / RO: Întreținere / EN: Maintenance

1.

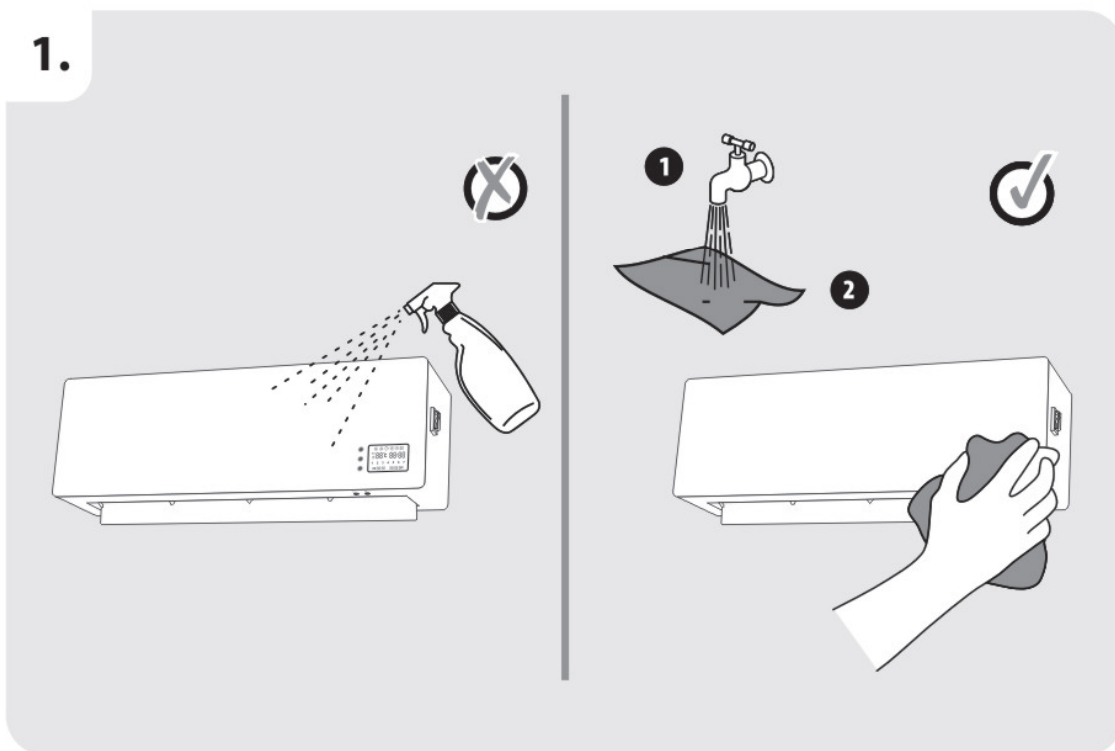


2.

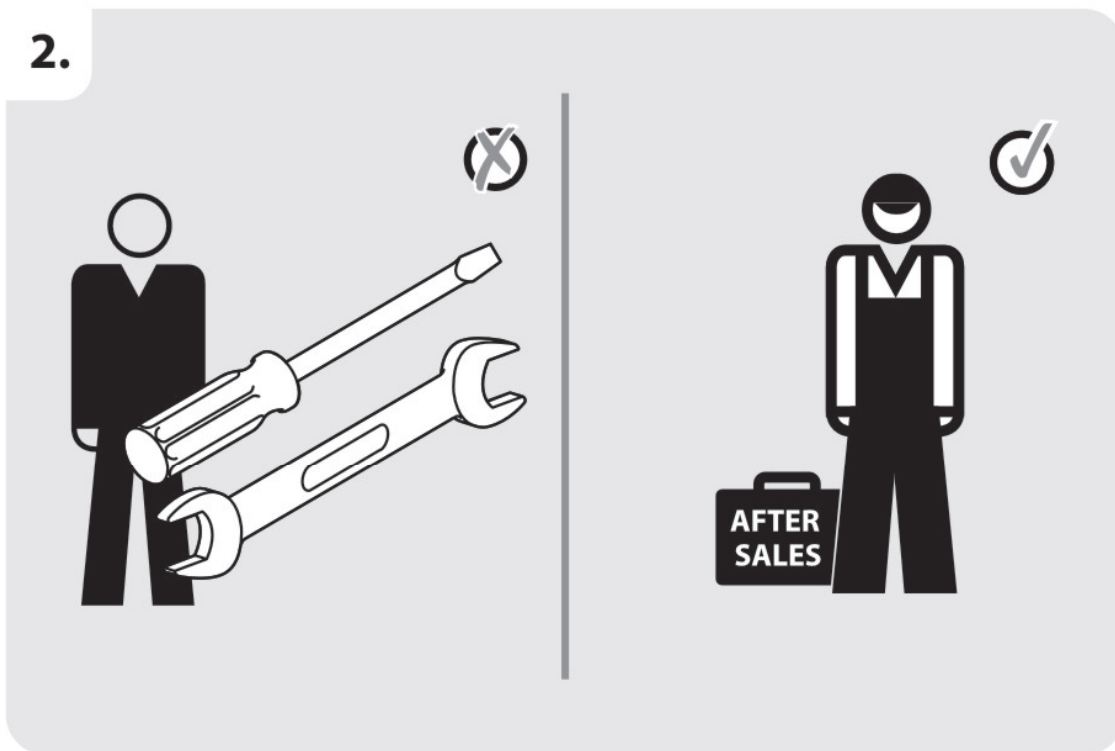



FR: Hivernage / ES: Durante el invierno / PT: Preparação para o inverno / IT: Rimessaggio /
EL: Αποθήκευση το χειμώνα / PL: Przechowywanie / RO: Pastrare pe perioada iernii /
EN: Winter storage

1.

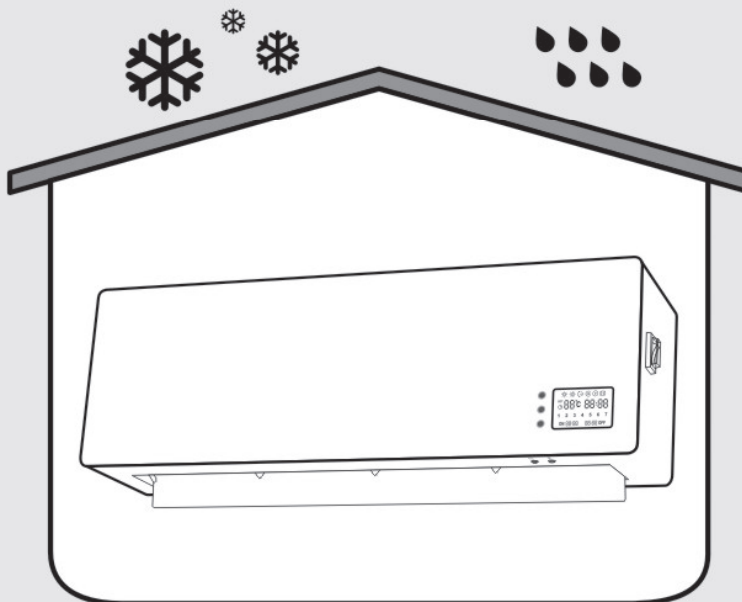



* Garantie 2 ans / 2 años de garantía / Garantia de 2 anos / Garanzia 2 Anni / Εγγύηση 2 ετών /
Gwarancja 2-letnia / Гарантия 2 года / Кепілдік 2 жыл / Гарантія 2 років / Garanție 2 ani /
2-years guarantee



Made in China 2022

ADEO Services - 135 Rue Sadi Carnot - CS 00001
59790 RONCHIN - France

KZ «Леруа Мерлен Казахстан» ЖШС Қазақстан
Республикасы, 050000, Алматы қ., Қонаев
көшесі, 77, «ParkView» БО, 6қ., 07 оф.

RU ООО ЛЕРУА МЕРЛЕН ВОСТОК, 141031, Московская область,
г. Мытищи, Осташковское шоссе, д.1, РОССИЯ

UA ТОВ «Леруа Мерлен Україна»,
вул. Полярна 17а, м. Київ 04201, Україна

